

Apollo VPX/97 PCI set

EP-51 VPXC

ISA PCI MainBoard

with Onboard PCI IDE and Super Multi-I/O.

TRADEMARK

All products and company names are trademarks or registered trademarks of their respective holders.

The specification is subject to change without notice.

V011

Read me first

1. The **"LOAD SETUP DEFAULTS"** function loads the system default data directly from ROM and initializes the associated hardware properly. This function is necessary when you accept this mainboard, or the system CMOS data will corrupt.

ROM BIOS CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PNP/PCI CONFIGURATION INTEGRATED PERIPHERALS LOAD SETUP DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT SETUP SAVING Load SETUP Default (Y/N)? Y
ESC: QUIT F10: Save & Exit Setup	
↑ ↓ → ← : SELECT ITEM (Shift)F2 : Change Color	
Load Setup Defaults Except Standard CMOS SETUP	

LOADSETUPDEFAULT

Contents

	page
Chapter 1 - Introduction.....	1-1
Chapter 2 - Hardware Design	2-1
2-1 Mainboard Layout	2-1
2-2 Connectors and Jumpers	2-3
2-3 System Memory Configuration	2-5
2-4 Integrated PCI Bridge	2-6
Chapter 3 - Award BIOS Setup	3-1
3-1 Standard CMOS Setup	3-2
3-3 BIOS Features Setup	3-2
3-3 Chipset Features Setup	3-6
3-4 Power Management Setup	3-8
3-5 PNP/PCI Configuration	3-10
3-6 Integrated Peripherals	3-12
3-7 Load Setup Defaults	3-14
3-8 Change Supervisor or User Password	3-15
3-9 IDE HDD Auto Detection	3-16
3-10 HDD Low Level Format	3-18
3-11 Save & Exit Setup	3-18
3-11 Exit Without Saving	3-18
Chapter 4 - Onboard Technical Information	4-1
4-1 I/O & Memory Map	4-1
4-2 Time & DMA Channels Map	4-2
4-3 Interrupt Map	4-2
4-4 RTC & CMOS RAM Map	4-3
Appendix A: Post Codes	4-4
Appendix B: I/O Connector	4-8

Package Checklist

**Please check your package which should include all items listed below.
If you find any item damaged or missed, please contact your supplier.**

- **One mainboard**
- **One manual**
- **One IDE ribbon cable**
- **One floppy ribbon cable**
- **One AGP driver diskette**
- **One Ultra_DMA IDE driver diskette**
- **One Audio driver CD title(optional)**

Chapter 1

Introduction

This mainboard is a high performance system hardware based on Intel Pentium processor and is equipped with three PCI slots, two standard ISA slots, Super Multi-I/O controller and dual port PCI-IDE connectors for the future expansion. The hardware dimension is 243mm x 190mm micro ATX form factor with a four-layer-design technology.

Specification

- VIA Apollo VPK97 PCIset chipset.
- Intel Pentium[®] Processor, AMD K5/K6, Cyrix 6x86L/6x86MX & idt C6 operating at 120 ~ 333 MHz and P55C with 321 ZIF socket 7 and scalability to accept faster Processors in the future.
- Supports up to 256 MegaBytes of DRAM (a minimum of 8 MB) on board (168-pin DIMM x 2). BIOS will automatically detect and configure FP/EDO and Synchronous DRAM.
- Supports 512KB Onboard Pipelined Burst (synchronous) L2 Cache.
- Supports two 16 bit ISA slots and three 32 bit PCI slots and provides two independent high performance PCI IDE interfaces capable of supporting PIO Mode 3/4 and Ultra-DMA33 devices. This mainboard supports four PCI Bus Masters and a jumperless PCI INT# control scheme which reduces configuration confusion when plugging in PCI I/O controller card(s).
- Supports ATAPI (e.g. CD-ROM) devices on both IDE interfaces.
- Supports 1 floppy port, 1 parallel port (EPP/ECP port), 2 serial ports (16550 Fast UART compatible) and dual USB ports.
- Supports a PS/2 style mouse and keyboard connectors.
- Supports Award Plug & Play BIOS. The BIOS is stored in Flash EPROM form. It provides better upgradeability for the system.
- Supports CPU Hardware sleep and SMM (System Management Mode).
- **This mainboard** utilizes Lithium battery which provides environmental protection and longer battery life.
- Supports an ATX power connector for a Remote On/Off, a Phone Ring Power On and Wake-up, On LAN function.

Chapter 2

Hardware design

2-1 Mainboard Layout

This mainboard is designed with VIA Apollo VPX/97 PCIset chipset which is developed by VIA Corporation to fully support Pentium® Processor PCI/ISA system. The chipset provides an integrated IDE controller with two high performance IDE interfaces for up to four IDE devices (hard devices, CD-ROM device, etc). The Winbond W83877TF Super I/O controller provides the standard PC I/O function: one floppy interface, two 16 Byte FIFO serial ports and one EPP/ECP capable parallel port. This mainboard layout is shown in the next page for user's reference. **Care must be taken** when inserting memory modules, CPUs or even plugging PCI card into associated slots to avoid damaging any circuits or sockets on board. A cooling fan is strongly recommended when installing Pentium/Pentium MMX/K5/K6/6x86L/6x86MX/C6 processor due to possible overheat.

This mainboard supports a minimum of 8MB and a maximum of 256MB of System Memory while Onboard 512KB cache to increase system performance.

This mainboard supports standard Fast Page, EDO (Extended Data Out or Hyper Page Mode) or synchronous DRAM. **This mainboard** provides two 168-pin DIMM sites for memory expansion. The sockets support 1M x 64(8MB), 2M x 64(16MB), 4M x 64(32MB), and 8M x 64(64MB) single-sided or double-sided memory modules. The memory timing requires 70 ns Fast page devices or 60 ns EDO DRAM (DRAM Modules may be parity [x 36] or non-parity [x 32]).

This mainboard supports two Onboard PCI IDE connectors, and automatically detects IDE harddisk type by BIOS utility automatic.

This mainboard supports Award Plug & Play BIOS for the ISA and PCI cards. The BIOS can be located in Flash EPROM which can replace BIOS code easily if necessary.

EP-51VPXC Layout


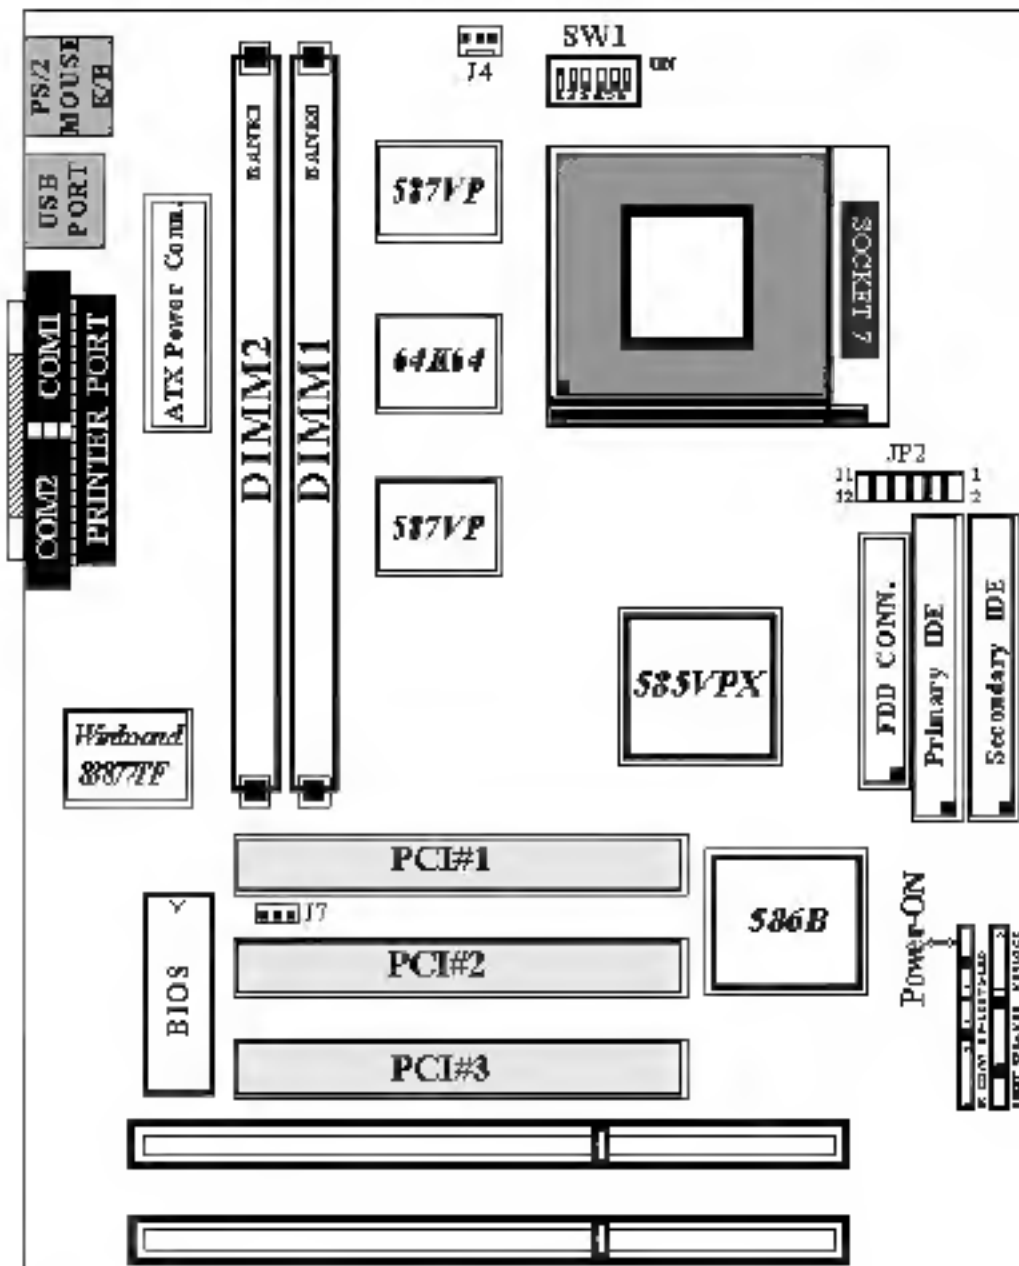


Figure 2-1

Note : SW1 setting

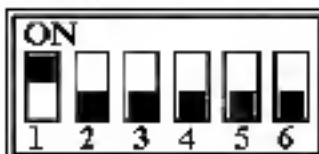

ON
: Means ON

ON
: Means OFF

2-2 Connectors and Jumpers

This section describes the connectors, jumpers and switch equipped in the mainboard. Please refer to [Figure 2-1](#) for the location of each connector and jumper.

SW1 : CPU Selection						idt C6 Pentium MMX AMD K5 / K6	Bus Frequency x Multiplier	Cyrrix & IBM 6x86(L) / 6x86MX
1	2	3	4	5	6			
ON	OFF	OFF	ON	OFF	OFF	120MHz	60MHz x 2	6x86L-PR150
			OFF	OFF	OFF	133MHz	66MHz x 2	6x86/L/MX-PR166
			OFF	ON	ON		75MHz x 2	6x86/L/MX-PR200
			ON	OFF	ON		83MHz x 2	6x86MX-PR233
ON	ON	OFF	ON	OFF	OFF	150MHz	60MHz x 2.5	6x86MX-PR166
			OFF	OFF	OFF	166MHz	66MHz x 2.5	6x86MX-PR200
			OFF	ON	ON	188MHz	75MHz x 2.5	6x86MX-PR233
			ON	OFF	ON	208MHz	83MHz x 2.5	* 6x86MX-PR266
OFF	ON	OFF	ON	OFF	OFF	180MHz	60MHz x 3	
			OFF	OFF	OFF	200MHz	66MHz x 3	* 6x86MX-PR233
			OFF	ON	ON	225MHz	75MHz x 3	* 6x86MX-PR266
OFF	OFF	OFF	OFF	OFF	OFF	233MHz	66MHz x 3.5	* 6x86MX-PR266
ON	OFF	ON				* 266MHz	66MHz x 4	
ON	ON	ON				* 300MHz	66MHz x 4.5	
OFF	ON	ON				* 333MHz	66MHz x 5	

* These settings are reserved for the future CPUs versions. When the future CPUs are ready and suitable for this mainboard, these settings will be correctly updated.

JP2 : CPU Vcore voltage selection :

■ ■	11-12 : 3.5V for Pentium, AMD K5, Cyrix 6x86 and idt C6
■ ■	9-10 : 3.2V for AMD K6-PR2-233
■ ■	7-8 : 2.9V for AMD K6-PR2-166/200 and Cyrix 6x86MX
■ ■	5-6 : 2.8V for Pentium MMX and Cyrix 6x86L
■ ■	3-4 : 2.2V for AMD K6 3D CPUs
■ ■	1-2 : 2.1V Reserved

J2 **KeyLock** - Keyboard lock switch & Power LED connector.

5	■	5. GND
	■	4. Key-Lock
	■	3. GND
	■	2. N/C
1	■	1. Power LED(+)
	□	Speaker - connect to the system's speaker for beeping
4	■	4 VCC
	■	3. GND
	■	2. N/C
1	■	1. Speaker
	□	
	■	Reset Switch - Closed to restart system.
	■	

J3

	■	Power-ON -Push the button to turn on the system.
	■	-Pressing less than 4 seconds to enter the suspend mode
	■	-Pressing more than 4 seconds to turn off the system
	□	
	■	Turbo LED indicator - LED ON when higher speed is selected
+	■	# There is no deturbo function so that the turbo LED is always ON.
	■	IDE LED indicator - LED ON when harddisks activate.
+	■	
	□	
		IrDA/ASK IR CONNECTOR
5	■	5. IRTX
	■	4. GND
	■	3. IRRX
	■	2. N/C
	■	1. VCC

J4**CPU FAN Connector****J7****WOL (Wake-up On Lan) Connector**


2-3 System Memory Configuration

This mainboard supports different type of settings for the system memory. The following figures and table provides all possible memory combinations.



DIMM1(BANK 0)	DIMM2(BANK 1)	TOTAL MEMORY SIZE
<div> <div>8MB</div> <div>16MB</div> <div>32MB</div> <div>64MB</div> <div>128MB</div> </div> <div>x1</div>	<div> <div>8MB</div> <div>16MB</div> <div>32MB</div> <div>64MB</div> <div>128MB</div> </div> <div>x1</div>	MAX= 256MB

NOTE 1 : The KEY ZONE of the DIMM socket is 3.3V/ Unbuffered.

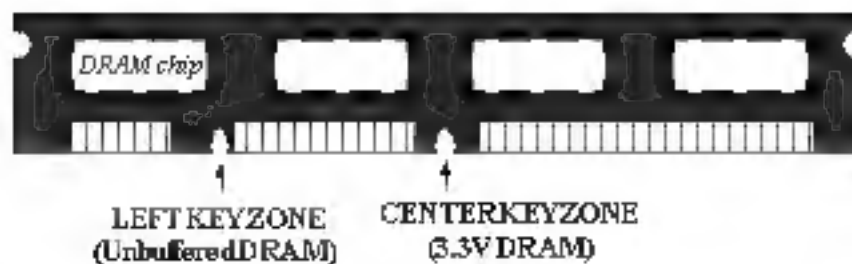

2-4 Integrated PCI Bridge

The EP-51VPXC utilizes VIA Apollo VPX/97 PCIset chipset to support Intel Pentium Processor P-III/SA system. The VIA Apollo VPX/97 PCIset chipset consists of the C-1505 VPX AI system controller (TSC), and one 82-758B PCI/ISA II E Accelerator bridge chip. It provides an interface which translates CPU cycle into PCI bus cycle, and PCI burst read/write capability. In addition, it provides high performance PCI arbiter to support four PCI Masters, Rotating Priority Mechanism and Hidden Arbitration Scheme. Minimizes Arbitration Overhead.

There are four interrupts in each PCI slot: INTA#, INTB#, INTC#, and INTD#. Since the mainboard adapts the PCI auto-configuration with the system BIOS Setup utility. When the system is turned on after adding a PCI add-in card, the BIOS automatically configure interrupts I/O channels I/O space, and other parameters. You do not have to configure jumpers or worry about potential resource conflicts. Because PCI cards use the same interrupt resource as ISA cards, you must specify the interrupt used by ISA add-in cards in the BIOS Setup utility.

However, for a "Legacy card" such as plugging a paddle card and cable into an ISA slot, special attention in the system initialization is required. The ROM SETUP UTILITY becomes necessary. First of all, you must enter **PCI CONFIGURATION SETUP** utility from the **ROM SETUP UTILITY** main menu to set "ISA" for the **'PCI IDE IRQ MAP TO**

Secondly, you must enter the **CHIPSET FEATURES SETUP UTILITY** from the **ROM SETUP UTILITY** main menu, and set "Disabled" for the **'Onboard Primary PCI IDE** and the **Onboard Secondary PCI IDE**. When you plug P-III/ISA II E cards into the system, You should select "Disabled" for the **Onboard Primary and Secondary PCI IDE** from the **CHIPSET FEATURES SETUP UTILITY** too.

You can set the system interrupt request (IRQ) on some "Legacy cards" which have optional cardware (able to re-define the command on the card) to a proper system IRQ level. In general, card's Primary is assigned to INTA and Secondary is assigned to INTB. If the card is plugged into a 16-bit marked PCI#1 slot, you cannot use the 16-bit slot (marked PCI#2) because the Secondary INT signal takes INTB from the 16-bit slot. Refer to Page 3-2 for circuit diagram. The user then enters the **PCI CONFIGURATION SETUP** utility from the **ROM SETUP UTILITY** main menu, and set "PCI Slot 1" for the **'PCI IDE IRQ MAP TO** (This depends on the slot # where the Legacy card is plugged).

CHAPTER 3

AWARD BIOS SETUP

Award's ROM BIOS provides a built-in setup program which allows user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS RAM so data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM stays unchanged unless there is a configuration change in the system such as a hard drive replacement or a new device installation.

If this does happen you will need to reconfigure your configuration parameter.

To Enter Setup Program

Power on the computer and press key immediately. This will bring you into BIOS CMOSSETUPUTILITY.

ROMPC715ABIOS(2A5LDPAB)	
CMOSSETUPUTILITY	
AWARDSOFTWARE,INC.	
STANDARD CMOS SETUP	SUPERVISOR PASSWORD
BIOS FEATURES SETUP	USER PASSWORD
CHIPSET FEATURES SETUP	IDE HDD AUTO DETECTION
POWER MANAGEMENT SETUP	HDD LOW LEVEL FORMAT
PNP/PCI CONFIGURATION	SAVE & EXIT SETUP
INTEGRATED PERIPHERALS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
ESC - QUIT	↑ ↓ → ← SELECT ITEM
F10 Save & Exit Setup	(Shift)F2 Change Color
Time, Date, Hard Disk Type	

Figure 3.1 CMOSSETUPUTILITY

The menu displays all major selection items. Select the item you need to reconfigure. The selection is made by moving cursor, press any direction key to the item and press the Enter key. An on-line help message is displayed at the bottom of the screen as the cursor is moving to various items which provides a better understanding of each function. When a selection is made, the menu of selected item will appear so the user can modify the associated configuration parameters.

3.1 STANDARD CMOS SETUP

Choose 'STANDARD CMOS SETUP' in the CMOS SETUP UTILITY Menu (Fig. 3-1). The STANDARD CMOS SETUP allows user to configure system setting such as the current date and time, type of hard disk drive installed, floppy drive type, and display type. Memory size is auto-detected by the BIOS and displayed for your reference. When a field is highlighted, use direction keys to move cursor and <Enter> key to select; the entries in the field will be changed by pressing <PgDn> or <PgUp> keys or user can enter new data directly from the keyboard.

ROM BIOS(AWARD BIOS(2A5LDPAB))																	
STANDARD CMOS SETUP																	
AWARD SOFTWARE, INC.																	
Date (mm/dd/yy) Wed Apr 17 1996																	
Time (hh:mm:ss) 14:30:30																	
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZONE	SECTORS	MODE									
Primary Master	Auto	0	0	0	0	0	0	Auto									
Primary Slave	Auto	0	0	0	0	0	0	Auto									
Secondary Master	Auto	0	0	0	0	0	0	Auto									
Secondary Slave	Auto	0	0	0	0	0	0	Auto									
Drive A: 1.44M, 3.5in				<table> <tr> <td>Base Memory</td> <td>640K</td> </tr> <tr> <td>Extended Memory</td> <td>19360K</td> </tr> <tr> <td>Other Memory</td> <td>384K</td> </tr> <tr> <td>Total Memory</td> <td>19684K</td> </tr> </table>						Base Memory	640K	Extended Memory	19360K	Other Memory	384K	Total Memory	19684K
Base Memory	640K																
Extended Memory	19360K																
Other Memory	384K																
Total Memory	19684K																
Drive B: None																	
Floppy 3 mode Support: Disable																	
Video: EGA/VGA																	
Halt On: All Errors																	
<table> <tr> <td>ESC Quit</td> <td>↑ ↑ → ←</td> <td>Select Item</td> <td>PL/PD(+) Modify</td> </tr> <tr> <td>F1 Help</td> <td>Shift F2</td> <td>Change Color</td> <td></td> </tr> </table>										ESC Quit	↑ ↑ → ←	Select Item	PL/PD(+) Modify	F1 Help	Shift F2	Change Color	
ESC Quit	↑ ↑ → ←	Select Item	PL/PD(+) Modify														
F1 Help	Shift F2	Change Color															

Figure 3-2 STANDARD CMOS SETUP

NOTE: If the hard disk Primary Master/Slave and the Secondary Master/Slave are set as "Auto", then the hard disk size and model will be auto-detected.

NOTE: The "Halt On" field is to determine when to halt the system by the BIOS if an error occurs.

3.2 BIOS FEATURES SETUP

Selecting the "BIOS FEATURES SETUP" option in the CMOS SETUP UTILITY menu allows user to change system-related parameters in the displayed menu. This menu shows all of the manufacturer's default values of this motherboard. Again, user can move the cursor by pressing direction keys and <PgDn> or <PgUp> keys to modify the parameters. Pressing F1 key to display help message of the selected item.

This setup program also provides 2 convenient ways to load the default parameter data from BIOS[F6] or CMOS[F7] area if shown data is corrupted. This provides the system a capability to recover from any possible error.

ROM PC/ISA BIOS(2A5LDPAB) BIOS FEATURES SETUP AWARD SOFTWARE, INC.					
Virus Warning	Disabled	Video BIOS	Shadow	Enabled	
CPU Internal Cache	Enabled	C8000-CBFFF	Shadow	Disabled	
External Cache	Enabled	CC000-CFFFF	Shadow	Disabled	
Quick Power On Self Test	Enabled	D0000-D3FFF	Shadow	Disabled	
Boot Sequence	A, C	D4000-D7FFF	Shadow	Disabled	
Swap Floppy Drive	Disabled	D8000-DBFFF	Shadow	Disabled	
Boot Up Floppy Seek	Enabled	DC000-DEFFF	Shadow	Disabled	
Boot Up NumLock Status	On				
Boot Up System Speed	High				
Gate A20 Option	Far				
Typeomatic Rate Setting	Disabled				
Typeomatic Rate (Chars/Sec)	6				
Type mtr Delay (Msec)	250				
Security Option	Setup				
PCL/VGA Palette Snoop	Disabled				
OS Select For DRAM > 64MB	Non-OS2				
		Esc Quit	↑ ↓ ← → Select Item		
		F1 Help	F2/PDA/ Modify		
		F5 Old Values	Shift+F2 Color		
		F7 Load Setup Defaults			

Figure 3-3 BIOS FEATURES SETUP

Note The **Security Option** contains "setup" and "system". The "setup" indicates that the password setting is for CMOS only while the "system" indicates the password setting is for both CMOS and system boot up.

- Virus Warning** This category flashes on the screen. During and after the system boots up, any attempt to write to the boot sector or partition table of the hard disk drive will halt the system and an error message will appear. You should then run an anti-virus program to locate the virus. Keep in mind that this feature protects only the boot sector, not the entire hard drive. Default value is Disabled.
 - Enabled** Activates automatically when the system boots up causing a warning message to appear when any attempt to access the boot sector or hard disk partition table.
 - Disabled** No warning message to appear when any attempt to access the boot sector or hard disk partition table.
- CPU Internal Cache External Cache:** These two categories speed up memory access. However, it depends on CPU chipset design. The default value is Enabled. If your CPU is without Internal Cache then this item "CPU Internal Cache" will not be shown.
 - Enabled** Enable cache
 - Disable** Disable cache

- **Quick Power On Self Test.** This category speeds up Power On Self Test (POST) after you power on the computer. If it is set to Enable, BIOS will shorten or skip some checking items during POST.
Enabled Enable quick POST
Disabled Normal POST
- **Boot Sequence** This category determines which drive is searched first for the O/S (Operating System). The default value is A,C.
A,C The system will search for floppy disk drive first then hard disk drive.
C,A The system will search for hard disk drive first then floppy disk drive.
- **Swap Floppy Drive:** This will swap your physical drive letters A&B if you are using two floppy disks. The default value is Disabled.
Enabled Floppy A & B will be swapped under the O/S.
Disabled Floppy A & B will be not swapped.
- **Boot Up Floppy Seek:** During Power-On Self Test (POST), BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. Only 360K type is 40 tracks while 720K, 1.2M and 1.44M are all 80 tracks. The default value is Enabled.
Enabled BIOS searches for floppy disk drive to determine if it is 40 or 80 tracks.
 Note that BIOS cannot tell from 720K, 1.2M or 1.44M drive type as they are all 80 tracks.
Disabled BIOS will not search for the type of floppy disk drive by track number.
 Note that there will not be any warning message if the drive installed is 360K.
- **Boot Up NumLock Status** The default value is On.
On Keypad is number keys.
Off Keypad is arrow keys.
- **Boot UP System Speed** Select default system speed. The system will run at the selected speed after the system boots.
High Set the speed to high.
Low Set the speed to low.
- **Gate A20 Option:** This refers to the way the system addresses memory above 1MB (extended memory). The default value is Fast.
Normal The A20 signal is controlled by keyboard controller or chipset hardware.
Fast The A20 signal is controlled by Port 92 or chipset specific method.

- ◆ **Typematic Rate Setting** This determines the typematic rate.
 - Enabled* Enable typematic rate and typematic delay programming.
 - Disabled* Disable typematic rate and typematic delay programming. The system BIOS will use default value of 2 items and the default is controlled by the keyboard.
- ◆ **TypematicRate(Chars/Sec):**

6 6 characters per second.	8 8 characters per second.
10 10 characters per second.	12 12 characters per second.
15 15 characters per second.	20 20 characters per second.
24 24 characters per second.	30 30 characters per second.
- ◆ **Typematic Delay(Msec)** This determines the time between the first and second character displayed, when holding a key.
 - 250** 250msec
 - 500** 500msec
 - 750** 750msec
 - 1000** 1000msec
- ◆ **Security Option.** This category allows you to limit access to the system and Setup, or just to Setup. The default value is Setup.
 - System:* The system will not boot and the access to Setup will be denied if the correct password is not entered at the prompt.
 - Setup* The system will boot, but the access to Setup will be denied if the correct password is not entered at the prompt.
- ◆ **PCI/VGA Palette Snoop:** This field controls the ability of a primary PCI VGA controller to share a common palette (when a snoop write cycles with an ISA video card). The default value is Disabled.
 - Enabled* If an ISA card connects to a PCI VGA card via the VESA connector and the ISA card connects to VGA monitor and uses the RAMDAC of PCI card, the PCI/VGA Palette Snoop is enabled.
 - Disabled:* Disable the VGA card Palette snoop function.
- ◆ **Video BIOS Shadow** It determines whether video BIOS will be copied to RAM, however, it is optional from chipset design. Video Shadow will increase the video speed.
 - Enabled* Video shadow is enabled.
 - Disabled* Video shadow is disabled.

- ◆ C8000 CBFFF Shadow
- CC000 CFFFF Shadow
- D0000 D3FFF Shadow
- D4000 D7FFF Shadow
- D8000 DBFFF Shadow
- DC000 DFFFF Shadow

These categories determine whether optional ROM will be copied to RAM by 16K byte or 32K byte perunit and the size depends on the chipset

Enabled Optional shadow is enabled.

Disabled Optional shadow is disabled

3.3 CHIPSET FEATURES SETUP

Choose the "CHIPSET FEATURES SETUP" in the CMOS SETUP UTILITY menu to display the following menu

ROM PCI/ISA BIOS(2A5LDPAB)	
CHIPSET FEATURES SETUP	
AWARD SOFTWARE, INC.	
DRAM Auto Configuration	60 ns
DRAM Timing Control	Auto
Video BIOS Cacheable	Enabled
System BIOS Cacheable	Disabled
Memory Hole At 5Mb Addr	Disabled
Fast DRAM Decoding	Disabled
Sustained WT Write	Enabled
2 Bank PEGRAM	2
Read Pipeline	Enabled
Write Pipeline	Enabled
Cache Timing	Fast
Linear Burst	Disabled
SDRAM Cycle Length	2
SDRAM Bank Interleave	Disabled

Esc	Quit	↑ ↓	← →	Select Item
F1	Help	PU/PD+=		Modify
F5	Old Values	Shift+F2		Color
F7	Load Setup Default			

Figure 3-4 CHIPSET FEATURES SETUP

Note When you insert slower memory modules in the system and set a faster timing, maybe the system will hang up

- **DRAM Timing** The default value is 60ns
60ns 2 (faster) Burst Wait State for 60-70ns Fast Page Mode/EDO DRAM
70ns 3 (slower) Burst Wait State for 70ns Fast Page Mode/EDO DRAM
- **Video BIOS Cacheable: The default value is Enabled**
Enabled Enabled the Video BIOS Cacheable to speed up the VGA Performance
Disabled Disabled the Video BIOS Cacheable function.
- **Memory Hole at 15M-16M** The default value is Disabled
Disabled Normal Setting.
Enabled This field enables the main memory 15-16MB remap to ISA BUS

3.4 POWER MANAGEMENT SETUP

Choose the '**POWER MANAGEMENT SETUP**' in the **CMOS SETUP UTILITY** to display the following screen. This menu allows the user to modify the power management parameters and IRQ signals. In general, these parameters should not be changed unless it is absolutely necessary.

ROM BIOS POWER MANAGEMENT SETUP AWARD SOFTWARE, INC.		
Power Management	User Define	←→ Power Down & Resume Event ←→
PM Control by APM	Yes	IRQ5 (LPT 2) Primary
Video off Option	Suspend > Off	IRQ6 (Floppy Disk) Disabled
Video off Method	VB SYNC+Blank	IRQ7 (LPT 1) Primary
Conserve Mode	Disabled	IRQ8 (RTC Alarm) Disabled
Modem Use RO	?	IRQ9 (IRQ2 Redir) Primary
←→PM Timer←→		IRQ10 (Reserved) Primary
HDD Power Down	Disable	IRQ11 (Reserved) Primary
Doze Mode	Disable	IRQ12 (PS/2 Mouse) Primary
Suspend Mode	Disable	IRQ13 (Coprocessor) Primary
←→PM Events←→		IRQ14 (Hard Disk) Primary
VGA	OFF	IRQ15 (Reserved) Disabled
LPT & COM	LPT/COM	
HDD & FDD	OFF	
DMA Master	OFF	
Primary INT#	ON	
IRQ1 (COM 2)	Primary	
IRQ4 (COM)	Primary	
		Esc: Quit ↑ ↓ Select Item
		F1: Help PU/PD/← → Modify
		F5: Old Values (Shift)F2: Color
		F7: Load Setup Defaults

Figure 3-5 POWER MANAGEMENT SETUP

Again, user can move the cursor by pressing direction keys to the field needed to be modified and press <PgDn> or <PgUp> to alter item selection. You can only change the content of **Doze Mode**, **Standby Mode**, and **Suspend Mode** when the **Power Management** is set to **User Define**.

3.4.1 The Description of the Power Management

A. Power Management mode selection

Disabled The system operates in NORMAL conditions (Non GREEN) and the Power Management function is disabled.

Max saving: This mode will maximize the power saving capability.

Min saving: This mode will minimize the power saving capability.

User define: Allow user to define time out parameters to control power saving mode. Refer to item B shown below.

B. Time-out parameters

HDD Standby

HDD Standby timer can be set from 1 to 5 minutes;

System Doze

The "System Doze" mode timer starts to count when there is no "PM events" occurred. The valid time-out settings from 1 minute up to 1 hour

System Suspend

This function works only when the Pentium Processor is installed. The timer starts to count when "System Standby" mode timer is timed out and no "PM Events" occurred. Valid range is from 1 minute up to 1 hour

3-4-2 Description of the Green Functions

This mainboard supports HDD Power Down, Doze and Suspend power saving functions. In addition, the hardware suspend function is supported when the J3 Power On (Refer to Figure2-1) is closed to enter the Suspend function.

The detailed description of these functions is provided in the next page.

HDD Standby Mode

When system stops reading or writing HDD, the timer starts to count. The system will cut off the HDD power when timer runs out of time. The system will not resume operation until either a read from or a write to HDD command is executed again.

Doze Mode

The system hardware will drop down CPU clock from normal working speed when Doze mode time-out occurs.

Suspend Mode

When the system suspend timer times out, the system will enter the suspend mode and the chipset will stop CPU clock immediately. The power consumption in Suspend Mode is lower than in standby mode. The screen is also blanked out.

PMEvents

AWARD BIOS defines 15 PM Events in the power management mode (Doze & suspend). The user can initialize any PM Events to be "Enable" or "Disable". When the system detects all of the enabled events do not have any activity. It will start the system Doze timer first if the "Power Management" is not "Disabled". Once the system Doze timer is timed out, it will process doze power saving procedure by starting the system suspend timer. When the suspend timer times out, all of the CPU clock will stop by dropping system clock down to zero and remains this way until any one of the "Enabled" event occurs.

3-5 PNP/PCI CONFIGURATION

The PNP/PCI configuration program is for the user to modify the PCI/ISA IRQ signals when various PCI/ISA cards are inserted in the PCI or ISA slots.

WARNING Any misprogramming IRQ could cause system can't pick out the resources.

ROM PCI/ISA BIOS(2A5LDPAB) PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.			
PNP enabled	No	CPU to PCI Write Buffer	Enabled
Resource Controlled By	Manual	PC Dynamic Bursting	Enabled
Resource Configuration Data	Disabled	PC Master/Slave Write	Enabled
		PC Bus Concurrency	Enabled
		PC Delay Transaction	Disabled
IRQ-3 assigned to	Legacy ISA	PC IRQ Activated By	Level
IRQ-4 assigned to	Legacy ISA	PC IDE IRQ Map To	PCI-AUTO
IRQ-5 assigned to	PCI/ISA PnP	Primary IDE INT#	A
IRQ-7 assigned to	Legacy ISA	Secondary IDE INT#	B
IRQ-9 assigned to	PCI/ISA PnP		
IRQ-10 assigned to	PCI/ISA PnP		
IRQ-11 assigned to	PCI/ISA PnP		
IRQ-12 assigned to	PCI/ISA PnP		
IRQ-14 assigned to	Legacy ISA		
IRQ-15 assigned to	Legacy ISA		
DMA-0 assigned to	PCI/ISA PnP		
DMA-1 assigned to	PCI/ISA PnP		
DMA-3 assigned to	PCI/ISA PnP		
DMA-5 assigned to	PCI/ISA PnP		
DMA-6 assigned to	PCI/ISA PnP		
DMA-7 assigned to	PCI/ISA PnP		
		ESC Quit	Enter Item
		F1 Help	PG/PD#> Modify
		F5 No Change	Shift F2 Color
		F7 Load Setup Defaults	

Figure 3-6 PCI CONFIGURATION SETUP

◆ **Resource Controlled By:** The default value is Manual.

Manual: The field defines that the PNP Card's resource is controlled by manual. You can set whether IRQ-X or DMA-X is assigned to PC/ISA/PNP or Legacy ISA Cards.

Auto: If your ISA card and PCI card are all PNP cards. Set this field Auto. The BIOS will assign the interrupt resource automatically.

◆ **Reset Configuration Data:** The default value is Disabled.

Disabled: Normal Setting.

Enabled: If you plug some Legacy cards in the system and record into ESCD (Extended System Configuration Data), You can set this field to be Enabled and to clear ESCD at one time, when some Legacy cards are removed.

◆ **PCI IDE IRQ Map To:** The default value is PCI AUTO.

When you have true PCI card(s) plugged into the system, you will not need to change any thing here in the **SETUP** program. However, if you do not know whether you are using a true PCI card, please refer to your PCI card user's manual for the details.

When you have a Legacy card described in section 2.5 to plug into the system, a proper setting is extremely important or it may cause the system hung up. The diagram shown below tells you how the Rotating Priority Mechanism is designed.

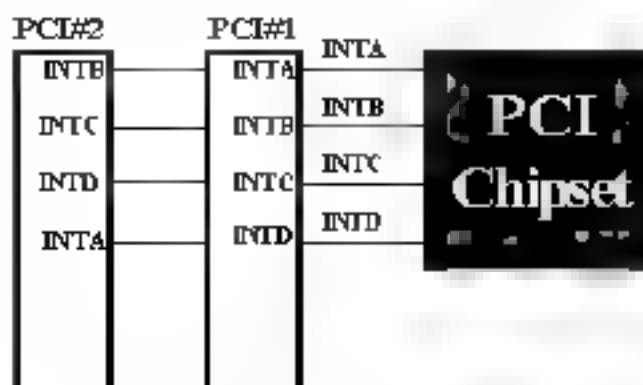


Figure 3.7 The Combination of PCIINT# Lines

3-6 INTEGRATED PERIPHERALS

ROM PCI/ISA BIOS(2A5LDPAB) INTEGRATED PERIPHERALS WARD SOFTWARE, INC.			
Onboard Primary PCI IDE	Enabled	Onboard Parallel Port	778/IRQ7
Onboard Secondary PCI IDE	Enabled	Onboard Parallel Mode	ECP/EPP
IDE Prefetch Mode	Enabled	ECP Mode Use DMA	9
IDE HDD Block Mode	Enabled	Parallel Port EPP Type	EPP#9
IDE primary Master PIO	Auto	Onboard USB Controller	Disabled
IDE Primary Slave PIO	Auto		
IDE Secondary Master PIO	Auto		
IDE Secondary Slave PIO	Auto		
IDE Primary Master UDMA	Auto		
IDE Primary Slave UDMA	Auto		
IDE Secondary Master UDMA	Auto		
IDE Secondary Slave UDMA	Auto		
PCI IDE Secondary Channel	Enabled		
Onboard IDE Controller	Enabled		
LART 2 Mode	Standard		
		ESC Quit	↑ ↓ ← → Select Item
		F1 Help	F10/PUPD/+/- Modify
		F5 No Change	Shift F2 Color
		F7 Load Setup Defaults	

Note: If you don't use the Onboard IDE connector, then use On-card (PCI or ISA card) IDE connector. You have to set Onboard Primary PCI IDE: Disabled and Onboard Secondary PCI IDE: Disabled from CHIPSET FEATURES SETUP UTILITY.
The Onboard PCI IDE cable should be equal to or less than 18 inches (45 cm.).

- IDE HDD Block Mode:** The default value is Enabled.
Enabled Enabled IDE HDD Block Mode. The HDD transfer rate is better than Disable.
Disabled: Disable IDE HDD Block Mode.
- PCI Slot IDE 2nd Channel:** The default value is Enabled.
Enabled Enable secondary IDE port and BIOS will assign IRQ 5 for this port.
Disabled Disable secondary IDE port and IRQ15 is available for other device.
- Onboard Primary PCI IDE:** The default value is Enabled.
Enabled Enable Onboard 1st channel IDE port.
Disabled Disable Onboard 1st channel IDE port. When use On-card (PCI or ISA card) IDE connector.
- Onboard Secondary PCI IDE:** The default value is Enabled.
Enabled Enable Onboard 2nd channel IDE port.
Disabled Disable Onboard 2nd channel IDE port. When use On-card (PCI or ISA card) IDE connector.

- ◆ **IDE Primary Master PIO** The default value is Auto
 - Auto* BIOS will automatically detect the Onboard Primary Master PCI IDE HDD Accessing mode
 - Mode 0~4* Manually set the IDE Accessing mode
- ◆ **IDE Primary Slave PIO** The default value is Auto
 - Auto* BIOS will automatically detect the Onboard Primary Slave PCI IDE HDD Accessing mode
 - Mode 0~4* Manually set the IDE Accessing mode
- ◆ **IDE Secondary Master PIO** The default value is Auto
 - Auto* BIOS will automatically detect the Onboard Secondary Master PCI IDE HDD Accessing mode
 - Mode 0~4* Manually set the IDE Accessing mode
- ◆ **IDE Secondary Slave PIO** The default value is Auto
 - Auto* BIOS will automatically detect the Onboard Secondary Slave PCI IDE HDD Accessing mode
 - Mode 0~4* Manually set the IDE Accessing mode
- ◆ **Onboard FDC Controller** The default value is Enabled
 - Enabled* Enable the Onboard floppy drive interface controller
 - Disabled* Disable the Onboard floppy drive interface controller
When using On card ISA FDC's controller
- ◆ **Onboard UART 1** This field allows the user to select the serial port. The default value is 3F8H/IRQ4
 - COM1* Enable Onboard Serial port 1 and address is 3F8H/IRQ4
 - COM2* Enable Onboard Serial port 1 and address is 2F8H/IRQ3
 - COM3* Enable Onboard Serial port 1 and address is 3E8H/IRQ4
 - COM4* Enable Onboard Serial port 1 and address is 2E8H/IRQ3
 - Disabled* Disable Onboard Serial port 1
- ◆ **Onboard UART 2** This field allows the user to select the serial port. The default value is 2F8H/IRQ3
 - COM1* Enable Onboard Serial port 2 and address is 3F8H/IRQ4
 - COM2* Enable Onboard Serial port 2 and address is 2F8H/IRQ3
 - COM3* Enable Onboard Serial port 2 and address is 3E8H/IRQ4
 - COM4* Enable Onboard Serial port 2 and address is 2E8H/IRQ3
 - Disabled* Disable Onboard Serial port 2

- **Onboard UART 2 Mode:** The default value is standard. This field allows the User to select the COM2 port that can support a serial Infrared Interface.
Standard: Support a Serial Infrared Interface IrDA.
HPSIR: Support a HP Serial Infrared Interface format.
ASKIR: Support a Sharp Serial Infrared Interface format.

- **Onboard Parallel port:** This field allows the user to select the LPT port. The default value is 378H/IRQ7.

378H	Enable Onboard LPT port and address is 378H and IRQ7
278H	Enable Onboard LPT port and address is 278H and IRQ5
3BCH	Enable Onboard LPT port and address is 3BCH and IRQ7
Disabled	Disable Onboard LPT port

NOTE Parallel Port address is 378H/3BCH that selects the routing of IRQ7 for LPT1.
 Parallel Port address is 278H that selects the routing of IRQ5 for LPT1.

- **Parallel port Mode:** This field allows the user to select the parallel port mode. The default value is ECP+EPP.
Normal Standard mode IBM PC AT Compatible bidirectional parallel port.
EPP Enhanced Parallel Port mode.
ECP Extended Capability Port mode.
EPP+ECP ECP Mode & EPP Mode.

ECP Mode USE DMA: This field allows the user to select DMA1 or DMA3 for the ECP mode. The default value is DMA3.

DMA1	The field selects the routing of DMA1 for the ECP mode.
DMA3	The field selects the routing of DMA3 for the ECP mode.

3.7 LOAD SETUP DEFAULTS

The "LOAD SETUP DEFAULTS" function loads the system default data directly from ROM and initializes the associated hardware properly. This function will be necessary only when the system CMOS data is corrupted.

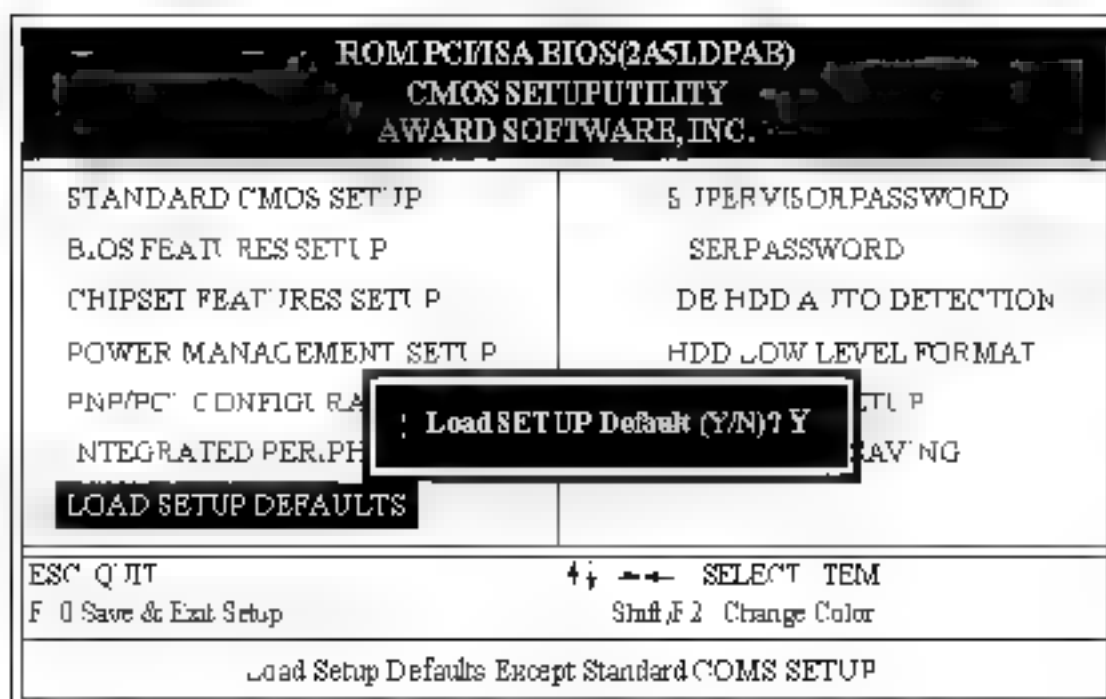


Figure 3-8 LOAD SETUP DEFAULT

3-8 CHANGE SUPERVISOR or USER PASSWORD

To change the password, choose the **'SUPERVISOR PASSWORD or USER PASSWORD'** option from the **CMOS SETUP UTILITY** menu and press **Enter**.

NOTE Either **'Setup'** or **'System'** must be selected in the **'Security Option'** of the **BIOS FEATURES SETUP** menu (Refer to Figure 3-3 for the details).

1. If CMOS is corrupted or the option is not used, a default password stored in the ROM will be used. The screen will display the following message:

Enter Password:

Press the **[Enter]** key to continue after proper password is given.

2. If CMOS is corrupted or the option was used earlier and the user wish to change default password, the **SETUP UTILITY** will display a message and ask for a confirmation.

Confirm Password:

3. After pressing the **[Enter]** key (ROM password if the option was not used or current password, user-defined password) the user can change the password and store new one in CMOS RAM. A maximum of 8 characters can be entered.

3.9 IDE HDD AUTO DETECTION

The "IDE HDD AUTO DETECTION" utility is a very useful tool especially when you do not know which kind of hard disk type you are using. You can use this utility to detect the correct disk type installed in the system automatically. But now you can set **HARD DISK TYPE** to **Auto** in the **STANDARD CMOS SETUP**. You do not need the "IDE HDD AUTO DETECTION" utility. The BIOS will Auto-detect the hard disk size and model on display during POST.

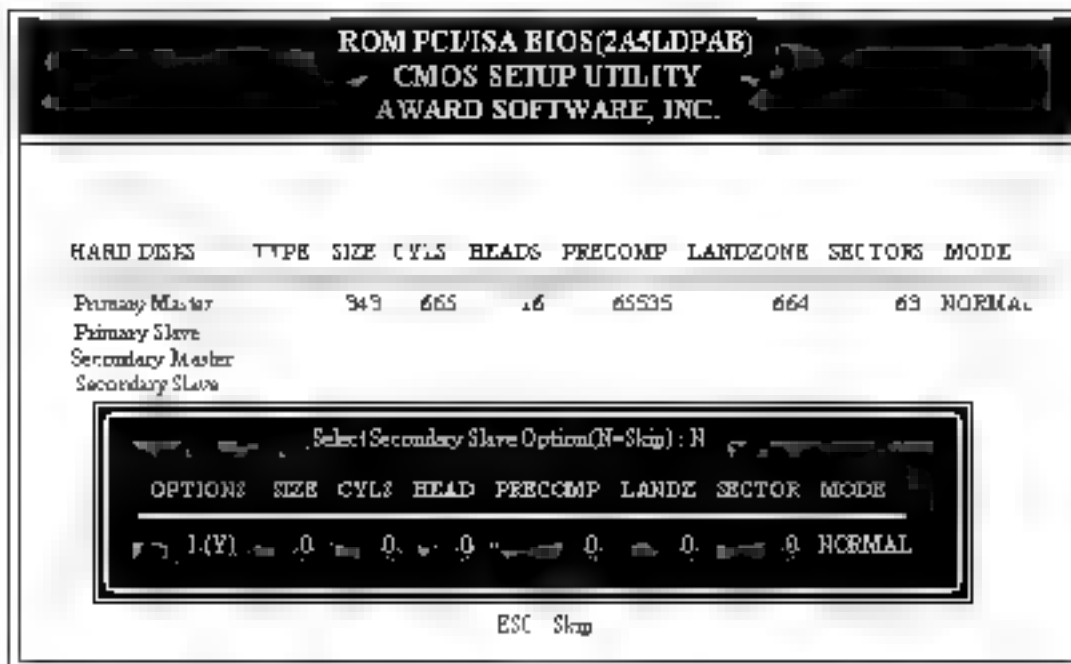


Figure 3-9 IDE HDD AUTO DETECTION

NOTE HDD Modes

The Award BIOS supports 3 HDD modes: NORMAL, LBA and LARGE. NORMAL mode

General access mode that is neither the BIOS nor the IDE controller will make transformations during accessing.

The maximum numbers of cylinders, head & sectors for NORMAL mode are 1024, 16 and 63.

	no Cylinder	(1024)
x	no Head	16)
x	no Sector	63)
x	no per sector	512)
	528 Megabytes	

If user sets his HDD to NORMAL mode, the maximum accessible HDD size will be 528 Megabytes even though its physical size may be greater than that.

LBA (Logical Block Addressing) mode This is a new HDD accessing method to overcome the 528 Megabyte bottleneck.

The number of cylinders, heads and sectors shown in the setup may not be the number physically contained in the HDD.

During the HDD accessing, the IDE controller will transform the logical address described by sector, head and cylinder into its own physical address inside the HDD.

The maximum HDD size supported by LBA mode is 8.4 Ggabytes which is obtained by the following formula:

$$\begin{array}{rcl}
 & \text{no Cylinder} & (1024) \\
 \times & \text{no Head} & (255) \\
 \times & \text{no Sector} & (63) \\
 \times & \text{bytes per sector} & (512) \\
 \hline
 & & 8.4 \text{ Ggabytes}
 \end{array}$$

LARGE mode This is an extended HDD access mode supported by Award Software.

Some IDE HDDs contain more than 1024 cylinders without LBA support. In some cases, user does not want LBA. The Award BIOS provides another alternative to support these kinds of LARGE mode.

CYLS	HEADS	SECTOR	MODE
120	16	59	NORMAL
540	32	59	LARGE

BIOS tricks DOS or other OS that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside INT 13h in order to access the right HDD address.

Maximum HDD size

$$\begin{array}{rcl}
 & \text{no Cylinder} & (1024) \\
 \times & \text{no Head} & (32) \\
 \times & \text{no Sector} & (63) \\
 \times & \text{bytes per sector} & (512) \\
 \hline
 & & 1 \text{ Ggabytes}
 \end{array}$$

Note

To support LBA or LARGE mode of HDDs, there must be some softwares involved. All softwares are located in the Award HDD Service Routine. NT 3h. It may fail to access a HDD with LBA (LARGE) mode selected if you are running under an Operating System which replaces the whole 1NT 3h. UNIX operating systems do not support either LBA or LARGE and must utilize the Standard mode. UNIX can support drives larger than 528MB.

3-10 HDD LOW LEVEL FORMAT

Interleave

Select the interleave number of the hard disk drive that you wish to perform a low level format on. You may select from 1 to 8. Check the documentation that came with the drive for the correct interleave number, or select 0 for automatic detection.

Auto scan bad track

This allows the utility to scan first then format by each track.

Start

Press <Y> to start low level format.

3-11 SAVE & EXIT SETUP

The "SAVE & EXIT SETUP" option will bring you back to boot up procedure with all the changes you just recorded in the CMOS RAM.

3-12 EXIT WITHOUT SAVING

The "EXIT WITHOUT SAVING" option will bring you back to normal boot up procedure without saving any data into CMOS RAM. All old data in the CMOS will not be destroyed.

Chapter 4

Technical Information

4.1 I/O & MEMORY MAP

MEMORY MAP

Address Range	Size	Description
[00000-7FFFF]	512K	Conventional memory
[80000-9FBFF]	127K	Extended Conventional memory
[9FC00-9FFFF]	1K	Extended BIOS data area if PS/2 mouse is installed
[A0000-C7FFF]	160K	Available for Hi-DOS memory
[C8000-DFFFF]	96K	Available for Hi-DOS memory and adapter ROMs
[E0000-EFFFF]	60K	Available for UMB
[EF000-EFFFF]	4K	Video service routine for Monochrome & CGA adaptor
[F0000-F7FFF]	32K	BIOS CMOS setup utility
[F8000-FCFFF]	20K	BIOS runtime service routine (2)
[FD000-FDFFF]	4K	Plug and Play ESCD data area
[FF000-FFFFFF]	8K	BIOS runtime service routine (1)

I/O MAP

[000-01F]	DMA controller (Master)
[020-021]	INTERF. PT. CONTROLLER (Master)
[022-023]	CHIPSET control registers / I/O ports
[040-05F]	TIMER control registers
[060-06F]	KEYBOARD interface controller (8042)
[070-07F]	RTC ports & CMOS I/O ports
[080-09F]	DMA register
[0A0-0BF]	INTERRUPT controller (Slave)
[0CD-0DF]	DMA controller (Slave)
[0F0-0FF]	MATH COPROCESSOR
[1F0-1F8]	HARD DISK controller
[27B-27F]	PARALLEL port 2
[2E0-2DF]	GRAPHICS adapter controller
[2F8-2FF]	SERIAL port 2
[360-36F]	NETWORK ports
[37B-37F]	PARALLEL port 1
[3E0-3BF]	MONOCHROME & PARALLEL port adapter
[3C0-3CF]	EGA adapter
[3D0-3DF]	CGA adapter
[3F0-3F7]	FLOPPY DISK controller
[3F8-3FF]	SERIAL port

4.2 TIME & DMA CHANNELS MAP

TIME MAP	TIMER Channel 0	System timer interrupt
	TIMER Channel 1	DRAM REFRESH request
	TIMER Channel 2	SPEAKER tone generator
DMA CHANNELS	DMA Channel 0	Available
	DMA Channel 1	Onboard ECP (Option,
	DMA Channel 2	FLOPPY DISK (SMC CHIP)
	DMA Channel 3	Onboard ECP default
	DMA Channel 4	Cascade for DMA controller
	DMA Channel 5	Available
	DMA Channel 6	Available
	DMA Channel 7	Available

4.3 INTERRUPT MAP

NMI	Parity check error
IRQ (H/W)	0 System TIMER interrupt from TIMER 0 KEYBOARD output buffer full
	2 Cascade for IRQ 8-15
	3 SERIAL port 2
	4 SERIAL port 1
	5 PARALLEL port 2
	6 FLOPPY DISK (SMC CHIP)
	7 PARALLEL port 1
	8 RTC clock
	9 Available
	10 Available
	11 Available
	12 PS/2 Mouse
	13 MATH coprocessor
	14 Onboard HARD DISK (IDE1 channel)
	15 Onboard HARD DISK (IDE2 channel)

4.4 RTC & CMOS RAM MAP

RTC & CMOS	00	Seconds
	0	Second alarm
	02	Minutes
	03	Minutes alarm
	04	Hours
	05	Hours alarm
	06	Day of week
	07	Day of month
	08	Month
	09	Year
	0A	Status register A
	0B	Status register B
	0C	Status register C
	0D	Status register D
	0E	Diagnostic status byte
	0F	Shutdown byte
	10	FLOPPY DISK drive type byte
	1	Reserve
	12	HARD DISK type byte
	13	Reserve
	14	Equipment type
	15	Base memory low byte
	16	Base memory high byte
	17	Extension memory low byte
	18	Extension memory high byte
	19-2d	
	2E-2F	
	30	Reserved for extension memory low byte
	3	Reserved for extension memory high byte
	32	DATE CENTURY byte
	33	INFORMATION FLAG
	34-3F	Reserve
	40-7F	Reserved for CHIPSET SETTING DATA

APPENDIX A: POST CODES

ISA POST codes are typically output to port address 80h.

POST(hex) DESCRIPTION

01-02	Reserved
C0	Turn off OEM specific cache, shadow
03	<ul style="list-style-type: none"> 1 Initialize EISA registers (EISA BIOS only) 2 Initialize all the standard devices with default values. Standard devices includes: <ul style="list-style-type: none"> -DMA controller (8237) -Programmable Interrupt Controller (8259) -Programmable Interval Timer (8254) -RTC chip
04	Reserved
05	<ul style="list-style-type: none"> 1 Keyboard Controller Self Test 2 Enable Keyboard interface
06	Reserved
07	Verifies CMOS's basic R/W functionality
C1	Auto-detection of onboard DRAM & Cache
C5	Copy the BIOS from ROM into E:0000-FFFFF shadow RAM so that POST will go faster
08	Test the first 256K DRAM
09	OEM specific cache initialization (if needed)
0A	<ul style="list-style-type: none"> 1 Initialize the first 32 interrupt vectors with corresponding Interrupt handlers Initialize INT no from 33-120 with Dummy (Suprious) Interrupt Handler 2 Issue CPUID instruction to identify CPU type 3 Early Power Management initialization (OEM specific)
0B	<ul style="list-style-type: none"> 1 Verify the RTC time is valid or not 2 Detect bad battery 3 Read CMOS data into BIOS stack area 4 PnP initializations including (PnP BIOS only) <ul style="list-style-type: none"> -Assign CSN to PnP ISA card -Create resource map from ESCD 5 Assign IO & Memory for PC devices (PCI BIOS only)

POST(hex) DESCRIPTION

0C	Initialization of the BIOS Data Area (40:04 - 40:FF)
0D	<p>Program some of the Chipset's values according to Setup (Early Setup Value Program)</p> <p>2 Measure CPU speed for display & decide the system clock speed</p> <p>3 Video initialization including Monochrome (CGA, EGA/VGA). If no display device found, the speaker will beep</p>
0E	<p>Test video RAM (if Monochrome display device found)</p> <p>2 Show messages including:</p> <ul style="list-style-type: none"> Award Logo Copyright string, BIOS Data code & Part No. OEM specific sign on messages Energy Star Logo Green BIOS ON! (?) CPU brand, type & speed Test system BIOS checksum (Non-Compress Version only)
0F	DMA channel 0 test
10	DMA channel 1 test
11	DMA page registers test
12-13	Reserved
14	Test 8254 Timer 0 Counter 2
15	Test 8259 interrupt mask bits for channel 0
16	Test 8259 interrupt mask bits for channel 1
17	Reserved
19	Test 8259 functionality
1A-1D	Reserved
1E	(if EISA NVM checksum is good, execute EISA initialization. (EISA BIOS only))
1F-29	Reserved
30	Detect Base Memory & Extended Memory Size
31	<p>Test Base Memory from 256K to 640K</p> <p>2 Test Extended Memory from 1M to the top of memory</p>

POST(hex) DESCRIPTION

32	Display the Award Plug & Play BIOS Extension message (PnP BIOS only) 2 Program all onboard super I/O chips (if any) including COM ports, LPT ports, FDD port according to setup value
33-3B	Reserved
3C	Set flag to allow users to enter CMOS Setup Utility
3D	Initialize Keyboard 2 Install PS/2 mouse
3E	Try to turn on Level 2 cache Note: Some chipset may need to turn on the L2 cache in this stage. But usually the cache is turn on later in POST 6th
3F-40	Reserved
BF	Program the rest of the Chipset's value according to Setup. Later Setup Value Program 2 If auto-configuration is enabled, programmed the chipset with pre-defined values
41	Initialize floppy disk drive controller
42	Initialize Hard drive controller
43	If it is a PnP BIOS, initialize serial & parallel ports
44	Reserved
45	Initialize math coprocessor
46-4D	Reserved
4E	If there is any error detected (such as video, kb) show all the error messages on the screen & wait for user to press <F1> key
4F	If password is needed, ask for password. 2 Clear the Energy Star Logo (Green BIOS only)
50	Write all CMOS values currently in the BIOS stack area back into the CMOS
51	Reserved

POST(hex) DESCRIPTION


- 52**
- 1 Initialize all ISA ROMs
 - 2 Later PCI initializations (PCI BIOS only)
 - assign IRQ to PCI devices
 - initialize all PCI ROMs
 - 3 PnP initializations (PnP BIOS only)
 - assign IO, Memory, IRQ & DMA to PnP ISA devices
 - initialize all PnP ISA ROMs
 - 4 Program shadows RAM according to Setup settings
 - 5 Program parity according to Setup setting
 - 6 Power Management initialization
 - Enable/Disable global PM
 - APM interface initialization
- 53**
- 1 If it is NOT a PnP BIOS, initialize serial & parallel ports
 - 2 Initialize time value in BIOS data area by translate the RTC time value into a timer tick value
- 60**
- Setup Virus Protection (Boot Sector Protection) functionality according to Setup setting.
- 61**
- Try to turn on Level 2 cache
 - Note If L2 cache is already turned on in POST 3D, this part will be skipped.
 - 2 Set the boot up speed according to Setup setting
 - 3 Last chance for Chipset initialization
 - 4 Last chance for Power Management initialization (Green BIOS only)
 - 5 Show the system configuration table
- 62**
- 1 Setup daylight saving according to Setup value
 - 2 Program the NMI Mask, typematic rate & typematic speed according to Setup setting
- 63**
- 1 If there is any changes in the hardware configuration, update the ESCD information (PnP BIOS only)
 - 2 Clear memory that have been used.
 - 3 Boot system via INT 9H
- FF**
- System Booting. This means that the BIOS already pass the control right to the operating system.

Unexpected Errors:**POST(hex) DESCRIPTION**

- B0**
- fatal interrupt occurs in protected mode
- B1**
- Invalidated NM occurs


APPENDIX B: CONNECTORS


ATX Power Supply Connector:

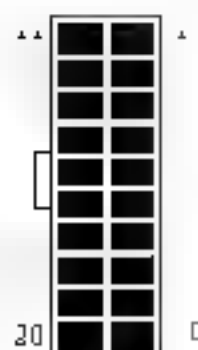

Signal Name	Pin	Pin	Signal Name
3.3V	11	1	3.3V
3.3V	12	2	3.3V
GND	13	3	GND
PS-ON	14	4	5.0V
GND	15	5	GND
GND	16	6	5.0V
GND	17	7	GND
5.0V	18	8	PW-OK
5.0V	19	9	5VSB
5.0V	20	10	2.0V

I/O back pannel connector:

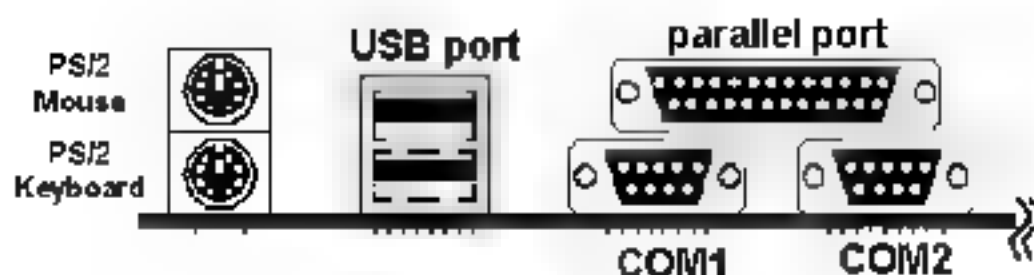

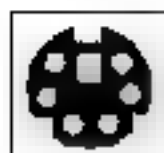PS/2 KEYBOARD & MOUSE CONNECTOR:

Pin	Signal Name
1	Data
2	Clock
3	GND
4	NC
5	VCC


COM1,COM2 : Serial Ports Connector

Signal Name	Pin	Pin	Signal Name
DCD	1	6	DSR
SIH	2	7	RTS
SO'JT	3	8	CTS
DTR	4	9	R.
GND	5		

LPT1: Parallel Port Connector


Signal Name	Pin	Pin	Signal Name
STROBE	1	4	AUTO FEED
Data Bit 0	2	15	ERROR
Data Bit 1	3	16	UNIT
Data Bit 2	4	7	SELECT IN
Data Bit 3	5	18	Ground
Data Bit 4	6	19	Ground
Data Bit 5	7	20	Ground
Data Bit 6	8	21	Ground
Data Bit 7	9	22	Ground
ACK	10	23	Ground
BUSY	11	24	Ground
PE	12	25	Ground
SELECT	13		

FDD1 Floppy Disk Connector

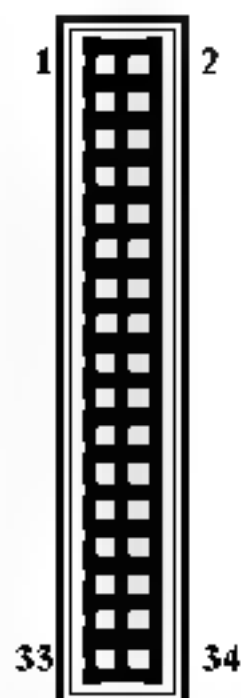

Signal Name	Pin	Pin	Signal Name
Ground	1	2	FDHDI
Ground	3	4	Reserved
Ground	5	6	FDEI
Ground	7	8	Index
Ground	9	10	Motor Enable
Ground	11	12	Drive Select B
Ground	13	14	Drive Select A
Ground	15	16	Motor Enable
Ground	17	18	DIR
Ground	19	20	STEP
Ground	21	22	Write Data
Ground	23	24	Write Gate
Ground	25	26	Track 00
Ground	27	28	Write Protect
Ground	29	30	Read Data
Ground	31	32	SIDE SELECT
Ground	33	34	Diskette

IDEL,IDE2 Primary Secondary IDE Connector

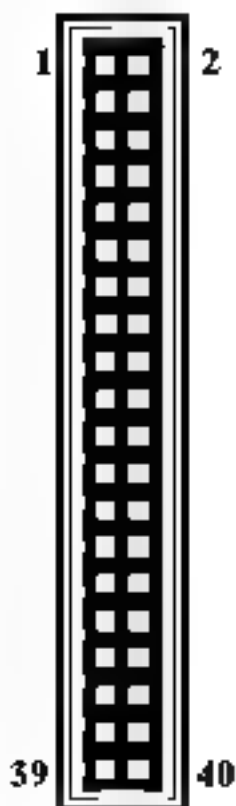

Signal Name	Pin	Pin	Signal Name
ResetIDE	1	2	Ground
Host Data 7	3	4	Host Data 8
Host Data 6	5	6	Host Data 9
Host Data 5	7	8	Host Data 10
Host Data 4	9	10	Host Data 11
Host Data 3	11	12	Host Data 12
Host Data 2	13	14	Host Data 13
Host Data 1	15	16	Host Data 14
Host Data 0	17	18	Host Data 15
Ground	19	20	Key
DRQ3	21	22	Ground
I/O Write	23	24	Ground
I/O Read	25	26	Ground
IOCHRDY	27	28	BALE
DAK3	29	30	Ground
IRQ4	31	32	IOCS16
Addr 1	33	34	Ground
Addr 0	35	36	Addr 2
Chip Select 0	37	38	Chip Select 1
Activity	39	40	Ground

EP-51VPXC Layout

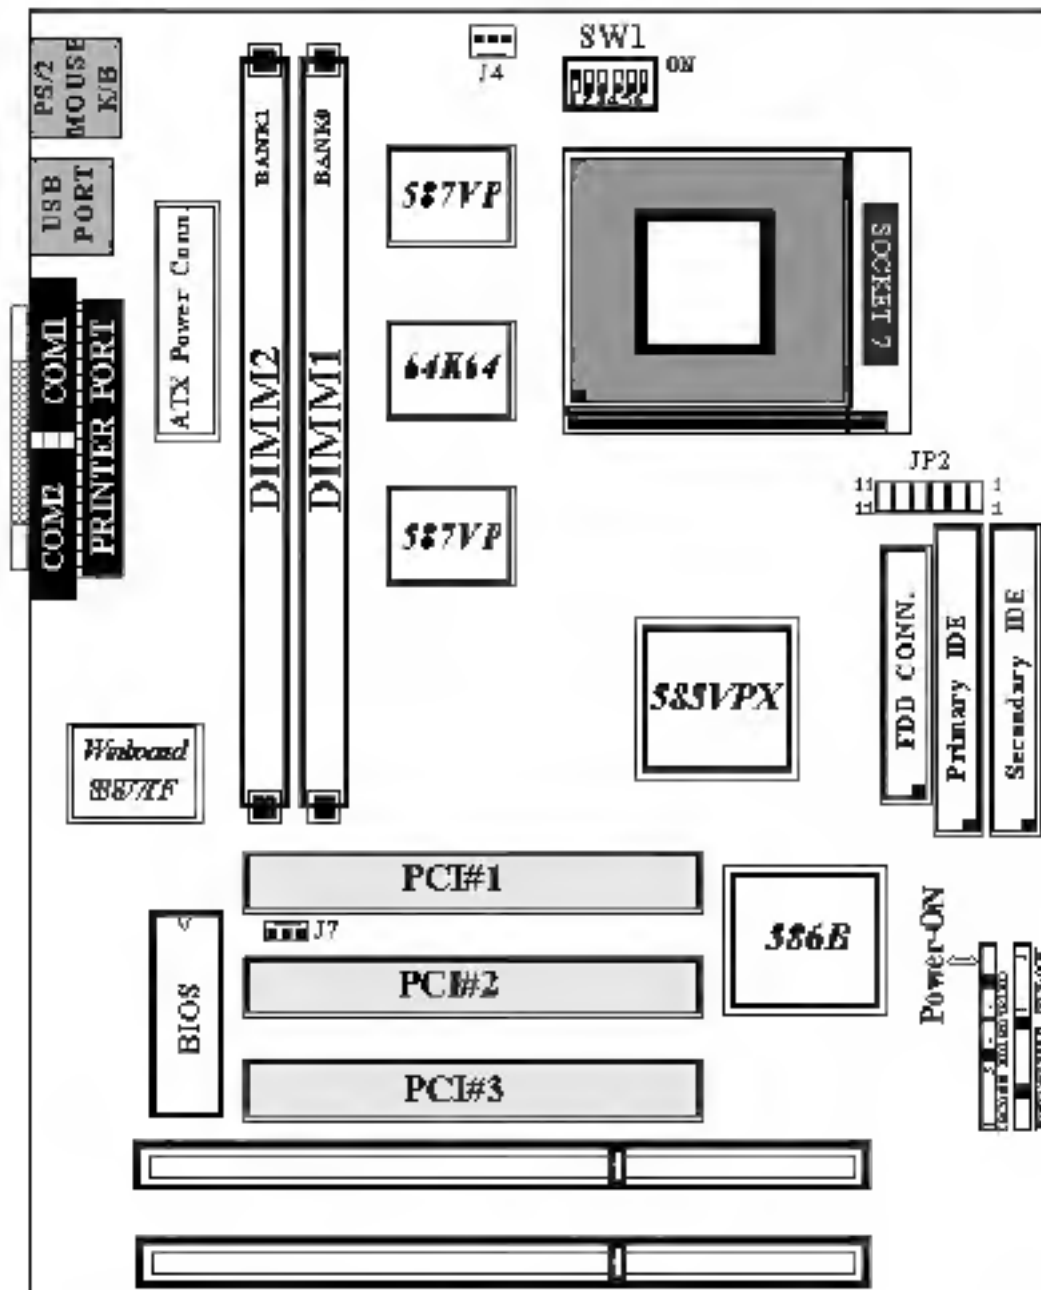


Figure 2-1

Note : SW1 setting



ON
: Means ON

ON
: Means OFF







Connectors and Jumpers

This section describes the connectors, jumpers and switch equipped in the mainboard. Please refer to **Figure 2-1** for the location of each connector and jumper.


SW1 : CPU Selection						idt C6 PentiumMMX AMD K5 / K6	Bus Frequency x Multiplier	Cyrix & IBM 6x86(L) / 6x86MX
1	2	3	4	5	6			
ON	OFF	OFF	ON	OFF	OFF	120MHz	60MHz x 2	6x86L-PR150
			OFF	OFF	OFF	133MHz	66MHz x 2	6x86/L/MX-PR166
			OFF	ON	ON		75MHz x 2	6x86/L/MX-PR200
			ON	OFF	ON		83MHz x 2	6x86MX-PR233
ON	ON	OFF	ON	OFF	OFF	150MHz	60MHz x 2.5	6x86MX-PR166
			OFF	OFF	OFF	166MHz	66MHz x 2.5	6x86MX-PR200
			OFF	ON	ON	188MHz	75MHz x 2.5	6x86MX-PR233
			ON	OFF	ON	208MHz	83MHz x 2.5	* 6x86MX-PR266
OFF	ON	OFF	ON	OFF	OFF	180MHz	60MHz x 3	
			OFF	OFF	OFF	200MHz	66MHz x 3	* 6x86MX-PR233
			OFF	ON	ON	225MHz	75MHz x 3	* 6x86MX-PR266
OFF	OFF	OFF	OFF	OFF	OFF	233MHz	66MHz x 3.5	* 6x86MX-PR266
ON	OFF	ON				* 266MHz	66MHz x 4	
ON	ON	ON				* 300MHz	66MHz x 4.5	
OFF	ON	ON				* 333MHz	66MHz x 5	

* These settings are reserved for the future CPUs versions. When the future CPUs are ready and suitable for this mainboard, these settings will be correctly updated.


JP2 : CPU Vcore voltage selection:

	11-12 : 3.5V for Pentium, AMD K5, Cyrix 6x86 and idt C6
	9-10 : 3.2V for AMD K6-PR2-233
	7-8 : 2.9V for AMD K6-PR2-166/200 and Cyrix 6x86MX
	5-6 : 2.8V for Pentium MMX and Cyrix 6x86L
	3-4 : 2.2V for AMD K6 3D CPUs
	1-2 : 2.1V Reserved

J2 KeyLock - Keyboard lock switch & Power LED connector.

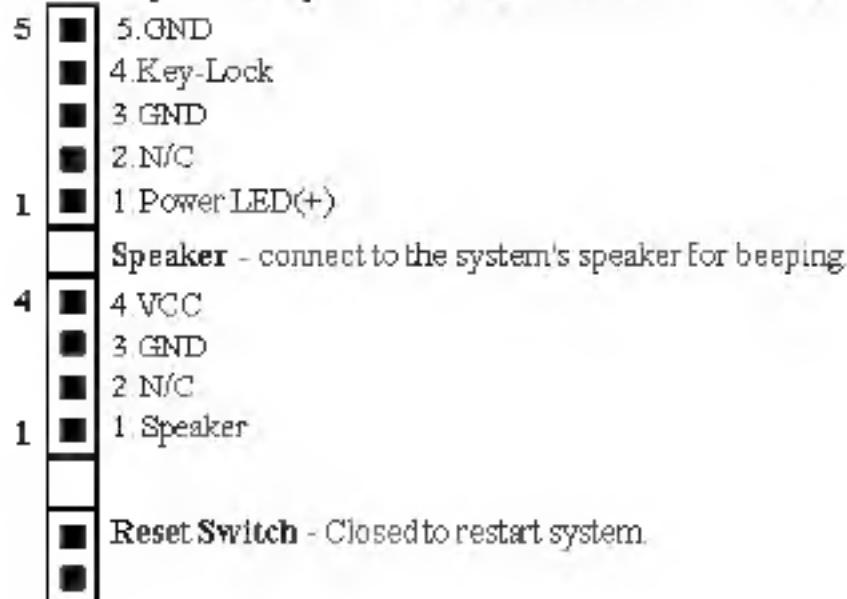

J3

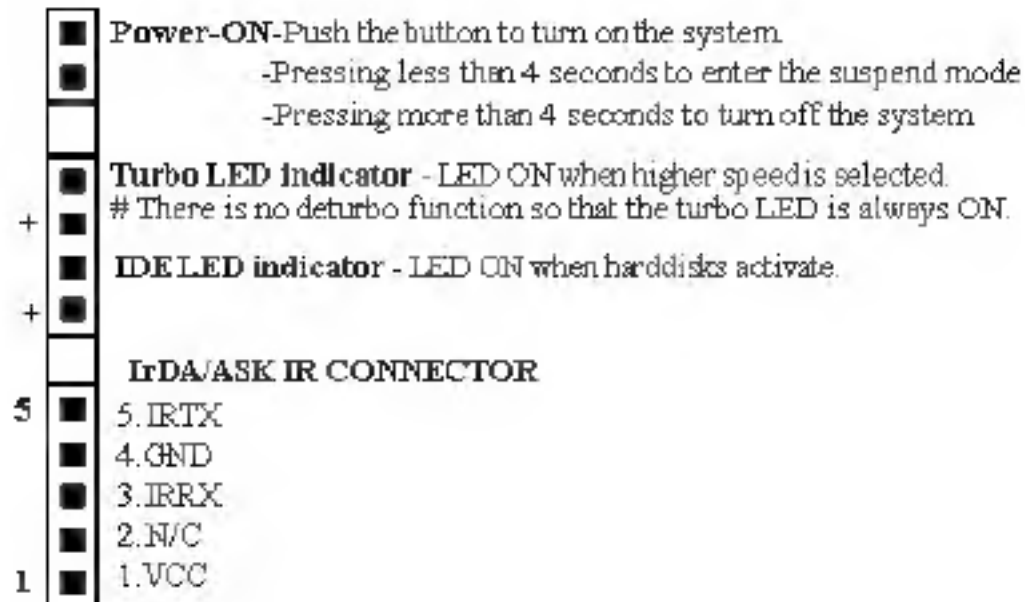

J4



CPU FAN Connector


J7



WOL (Wake-up On Lan) Connector


System Memory Configuration

This mainboard supports different type of settings for the system memory. The following figures and table provides all possible memory combinations.

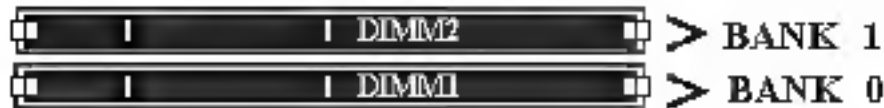

DIMM 1(BANK 0)	DIMM2(BANK1)	TOTAL MEMORY SIZE
<div> <div>8MB</div> <div>16MB</div> <div>32MB</div> <div>64MB</div> <div>128MB</div> </div> <div>x 1</div>	<div> <div>8MB</div> <div>16MB</div> <div>32MB</div> <div>64MB</div> <div>128MB</div> </div> <div>x 1</div>	MAX= 256MB

NOTE 1 : The KEY ZONE of the DIMM socket is 3.3V / Unbuffered.

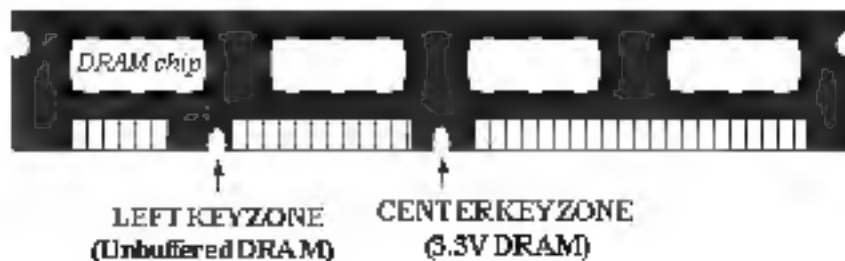

I/O back panel connector:

